

All-in-one

**CELESTE** PRO

Além das Estrelas 

Manual de Instruções



---

MENOR ELECTRONICS

---

All-in-one

**CELESTE** PRO

Além das Estrelas 

Manual de Instruções



MENOR ELECTRONICS



**Desempenho profissional, design celestial. Descubra a  
fusão perfeita de tecnologia avançada com o  
All-in-One CΞLESTE PRO**

*Além das Estrelas* 

---

**MENOR ELECTRONICS**

[www.Menor.co.mz](http://www.Menor.co.mz)



## Precauções antes de usar

1. Esta produção é adequada para uso em áreas abaixo de 2.000 metros.
2. Evite que o dispositivo caia no chão ou sofra impactos fortes.
3. Não o utilize por muito tempo em ambientes onde o ar esteja muito frio, muito quente, húmido ou com muita poeira. Não exponha o dispositivo à luz solar.
4. Evite usá-lo em ambientes magnéticos e estáticos fortes, tanto quanto possível.
5. Caso água ou outro líquido entrem no dispositivo, desligue-o imediatamente e não o utilize até que seque.
6. Não limpe o aparelho com nenhum detergente que contenha elementos químicos ou outros líquidos para evitar causar danos por corrosão e humidade. Se for necessária limpeza, limpe-o com papel macio e seco.
7. A MENOR ELECTRONICS não assume a responsabilidade pela perda ou exclusão de material/ informação, causada pela operação anormal de software e hardware, manutenção ou qualquer outro acidente.
8. Faça backup do seu material importante para evitar perdas.
9. Não desmonte o dispositivo sozinho. Caso contrário, perderá o direito à garantia.



# Visão Geral do All-in-one Celeste Pro

## Características



### Navegar na Web

Visite os seus sites favoritos



 
### Ligue-se à Internet sem fios

Rede Wi-Fi 802.11 ac/b/g/n de alta velocidade




### Verifique o seu e-mail

Mantenha-se em contacto com amigos e familiares

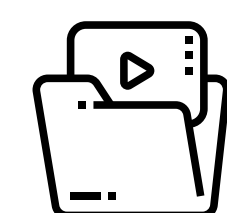

### Biblioteca multimédia

 Música, vídeos e fotos acessíveis em qualquer instante

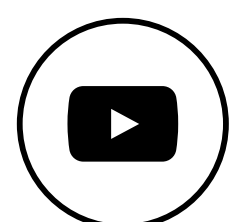


### Veja vídeos do YouTube™

Navegue pela comunidade de partilha de vídeos, mais popular do mundo



### Gaming

 Desfrute de videojogos, aplicações multimédia e entretenimento digital de alta resolução

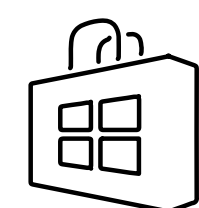

### Descubra milhares de aplicações para Windows™

 
Instale jogos, aplicações e muito mais através da Loja Microsoft™

All-in-one  
CELESTE PRO


Além das Estrelas 



# Conheça o All-in-one Celeste Pro

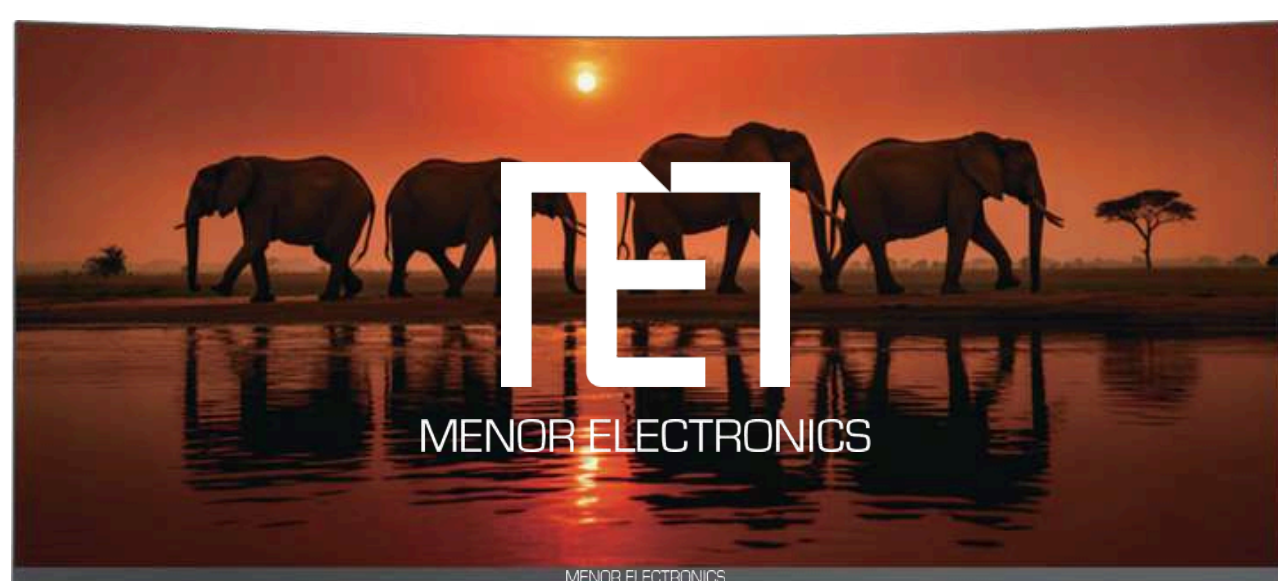

2

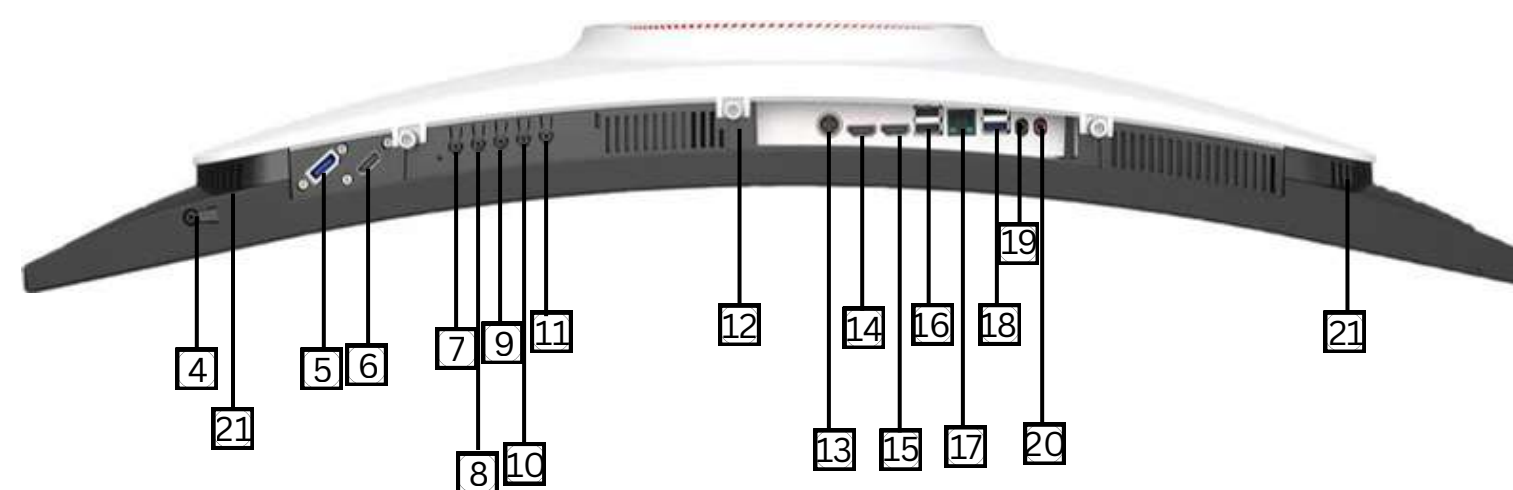 

1. Botão de ligar
2. Além das Estrelas
3. Porta USB-A
4. Botão Arco-íris
5. Entrada DisplayPort
6. Entrada HDMI
7. Menu OSD (On-Screen Display)
8. Navegação para cima
9. Navegação para baixo
10. Sair / Cancelar
11. Ligar o painel LCD
12. Bloqueio KENSINGTON
13. Entrada de alimentação
14. Entrada HDMI
15. Saída HDMI
16. Porta USB 2.0
17. LAN Ethernet RJ45
18. Porta USB 3.2 Gen 2
19. Entrada de microfone
20. Saída de áudio
21. Altifalantes

All-in-one  
CELESTE PRO

Além das Estrelas →



# Conheça o ecrã do All-in-one Celeste Pro



1. **Ecrã inicial** - Exibe informações úteis rapidamente, sem abrir a aplicação.
2. **Conta Microsoft™** - Altere as configurações da conta ou mude para outra conta de usuário.
3. **Configurações** - Visualize e altere quaisquer configurações do sistema.
4. **Energia** - Desligue, hiberne ou coloque o seu PC em suspensão.
5. **Barra de pesquisa** - Encontre rapidamente arquivos, direcções, informações ou o nome de uma música.
6. **Área de Notificação** - Veja todas as notificações, data e hora.

**i** Precisa de fazer *login* na sua conta da Microsoft antes de o programa da aplicação ser executado completamente.



# Usar o All-in-One Celeste Pro

## Iniciar

Pressione e segure o botão de energia até que a tela ligue.  
Aguarde até que a tela da área de trabalho apareça.  
O computador agora está pronto para usar.

Assim que ligar o seu All-in-one Celeste Pro, o assistente de inicialização ajudará a configurar o dispositivo:

- Língua
- Data/hora
- Conexão WiFi
- Opções de serviço de localização
- Aplicações de terceiros
- Actualizações necessárias
- Sincronização de conta

# Ligar o All-in-One Celeste Pro

Para ligar o All-in-One Celeste Pro

Mantenha pressionado o botão de ligar durante 2 segundos, até que a tela se ligue.

Aguarde até que a tela da área de trabalho apareça. O All-in-One Celeste Pro está agora pronto a ser utilizado.

Para desligar o All-in-One Celeste Pro

Pressione o botão *Iniciar* e clique no ícone de energia. Isso então dá a opção de desligar, dormir ou reiniciar

 


# Configurações do ecrã

## Ligar ou desligar a tela

Quando o All-in-One Celeste Pro está ligado, pode desligar a tela para proteger o ecrã. Simplesmente pressione o botão *Iniciar* e clique no ícone de energia, Em seguida, escolha Hibernar.

Recomenda-se vivamente que inicie a sessão na conta do Windows (necessária para a instalação de novas aplicações). Quando solicitado, também é recomendável que clique em aceitar fazer backup do seu All-in-One Celeste Pro. Assim, serão criadas cópias de todos os seus arquivos, e será mais fácil, caso precise de fazer o restauro do All-in-One Celeste Pro.

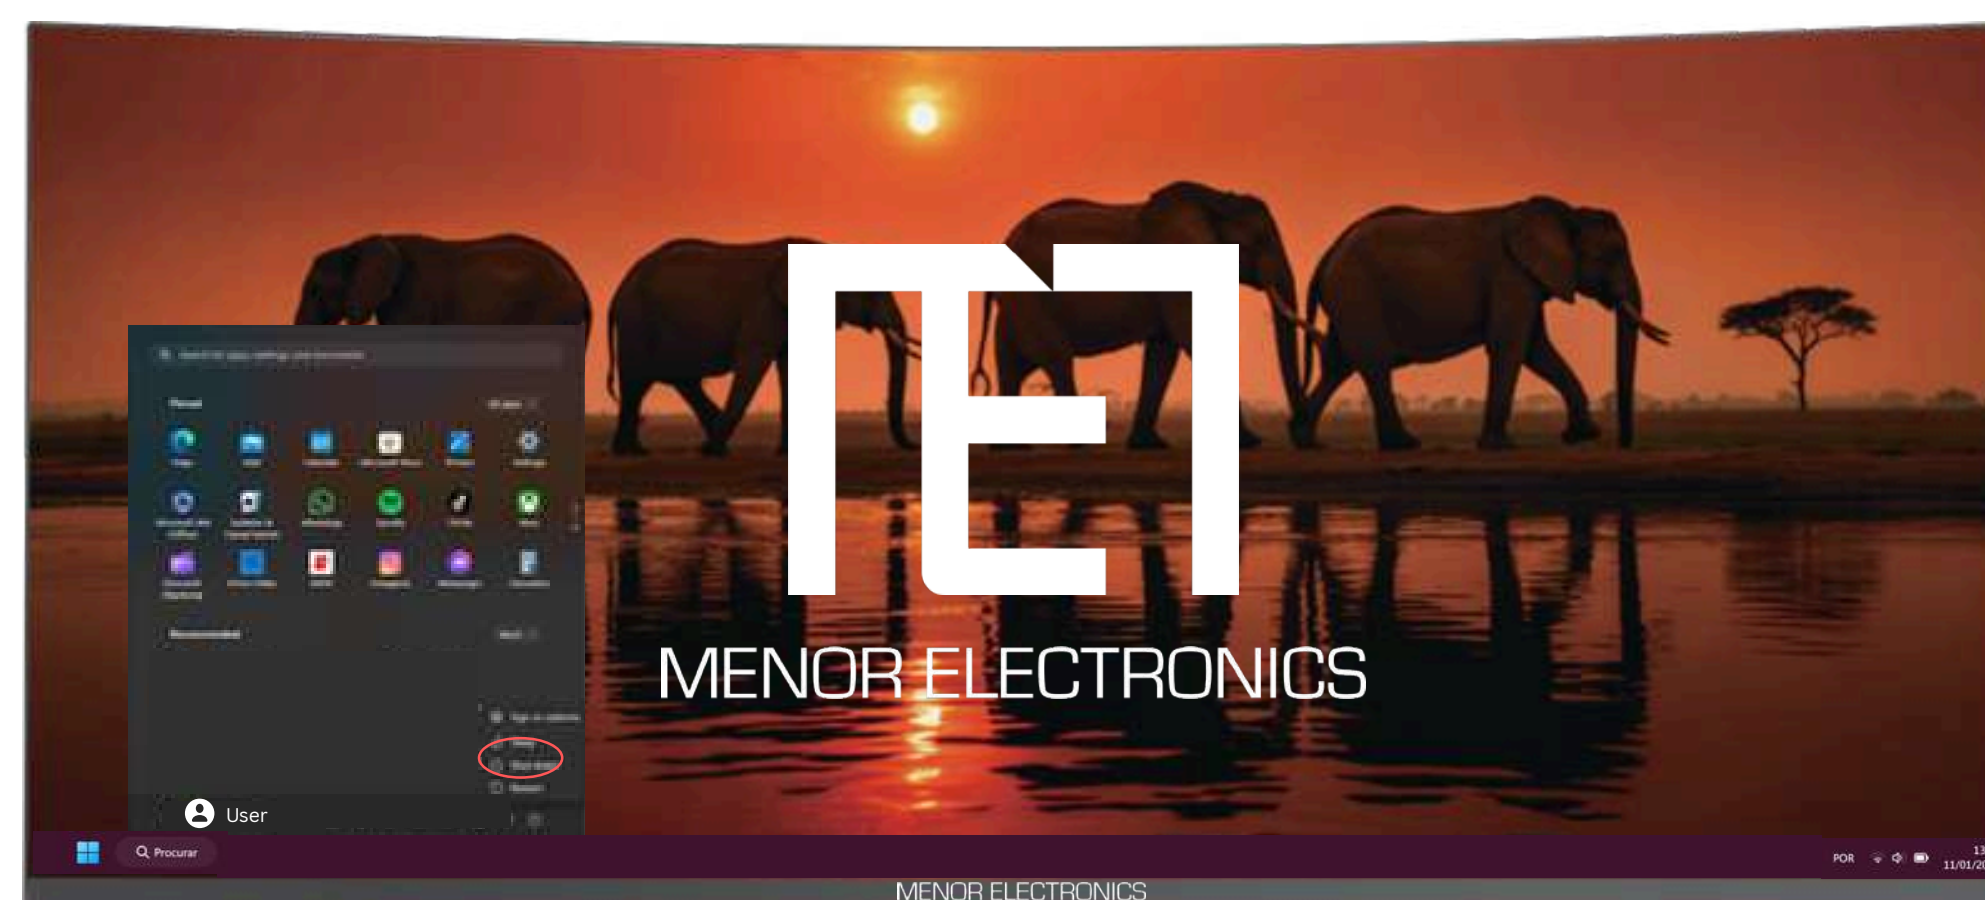

## Ligar a uma rede Wi-Fi


A barra de notificação exibe ícones que indicam o estado da internet do seu All-in-One Celeste Pro.



Ligado a uma rede Wi-Fi (as ondas indicam a força da ligação).



Não existem redes Wi-Fi no seu alcance ou o Wi-Fi não está ligado.

 
Abra o menu *Configurações* pressionando o botão *Iniciar* e clicando no ícone de configurações 

Selecione a sua rede na lista de redes disponíveis. O All-in-One Celeste Pro solicitará que confirme a conexão à rede. Toque em *Conectar* para confirmar.

Se a rede estiver protegida (aparecerá um ícone de um cadeado), o All-in-One Celeste Pro solicitará que insira uma palavra passe ou outras credenciais.




O ícone de configurações também pode ser encontrado na área de trabalho. Abra o menu *Rede e Internet* e ligue o Wi-Fi.

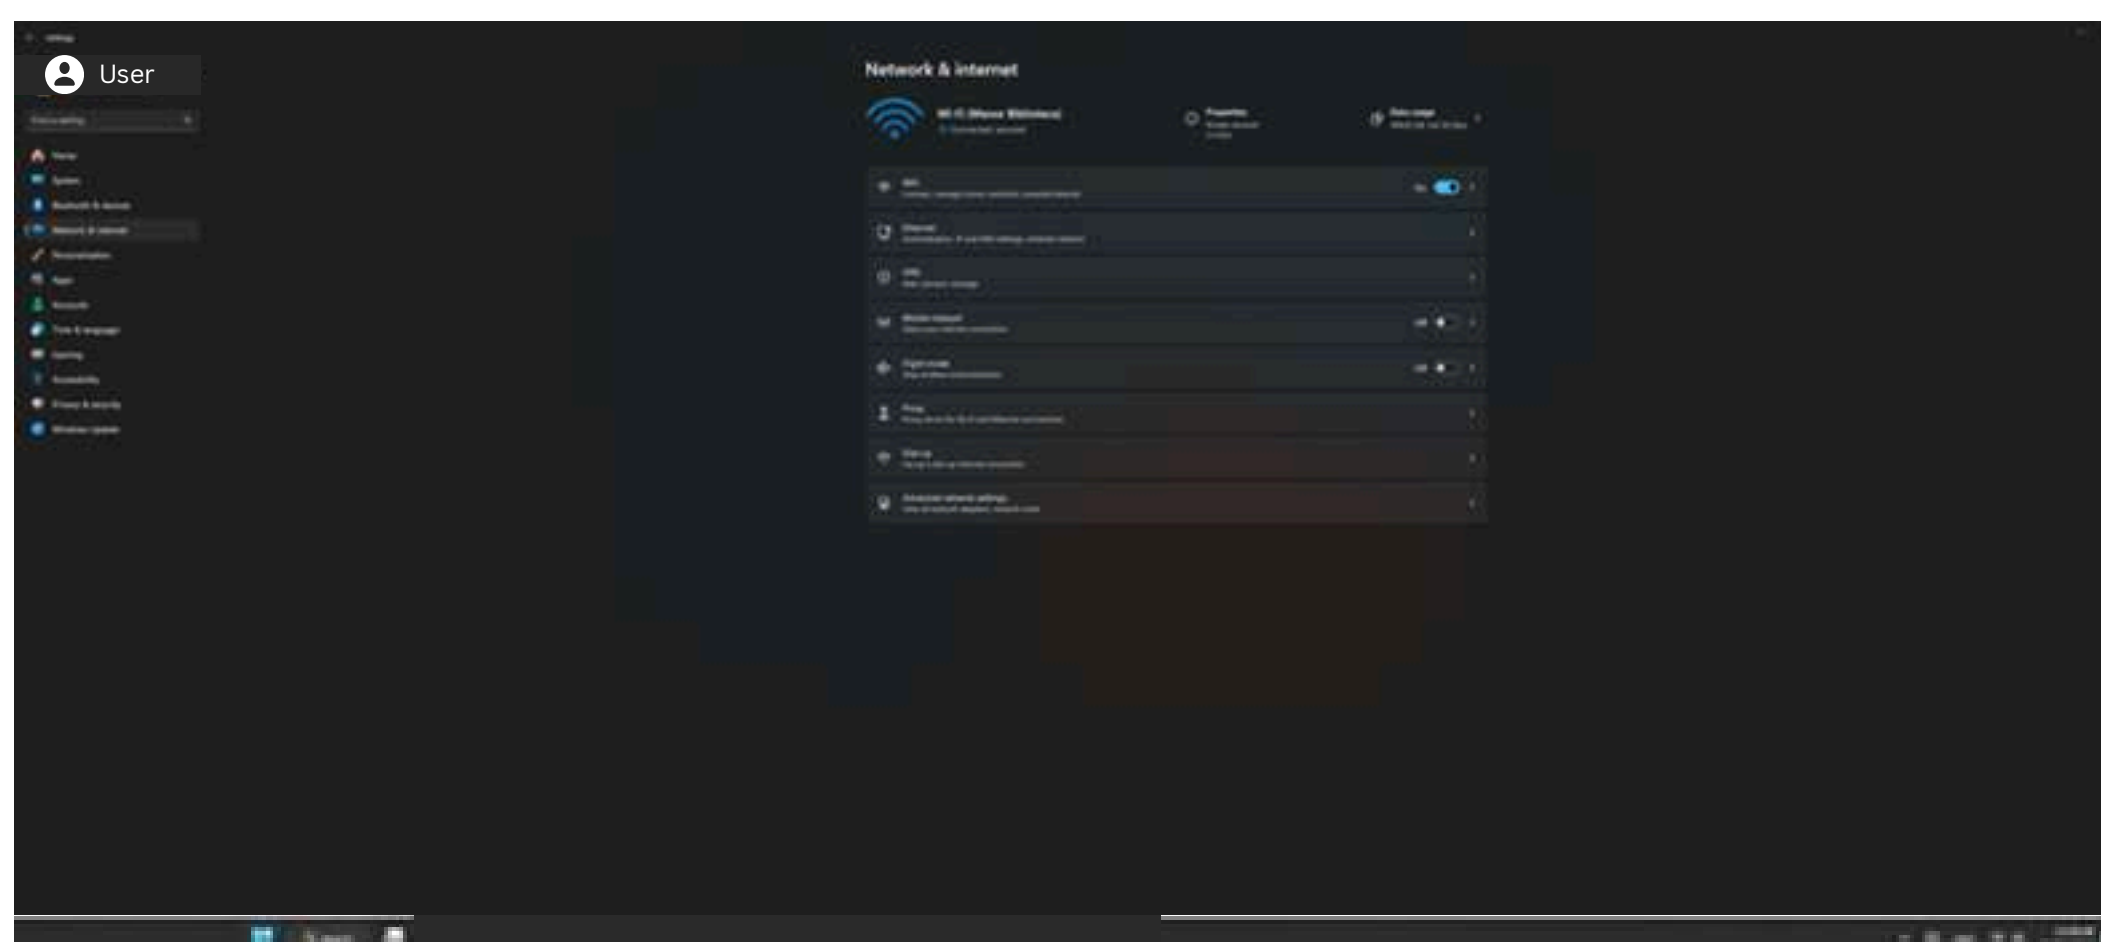



# Interface do usuário

## Menu Iniciar

 
Para abrir o menu *Iniciar*, seleccione o ícone  no canto inferior esquerdo da área de trabalho. Uma vez aberto o menu, terá acesso a uma variedade de opções

## Aplicações

Para além de poder fixar as aplicações no ecrã, pode abri-las, na página inicial.

## Adicionar um mosaico de atalho ao menu Iniciar

1. Clique com o botão direito do rato em propriedades
2. Seleccione fixo no início da página

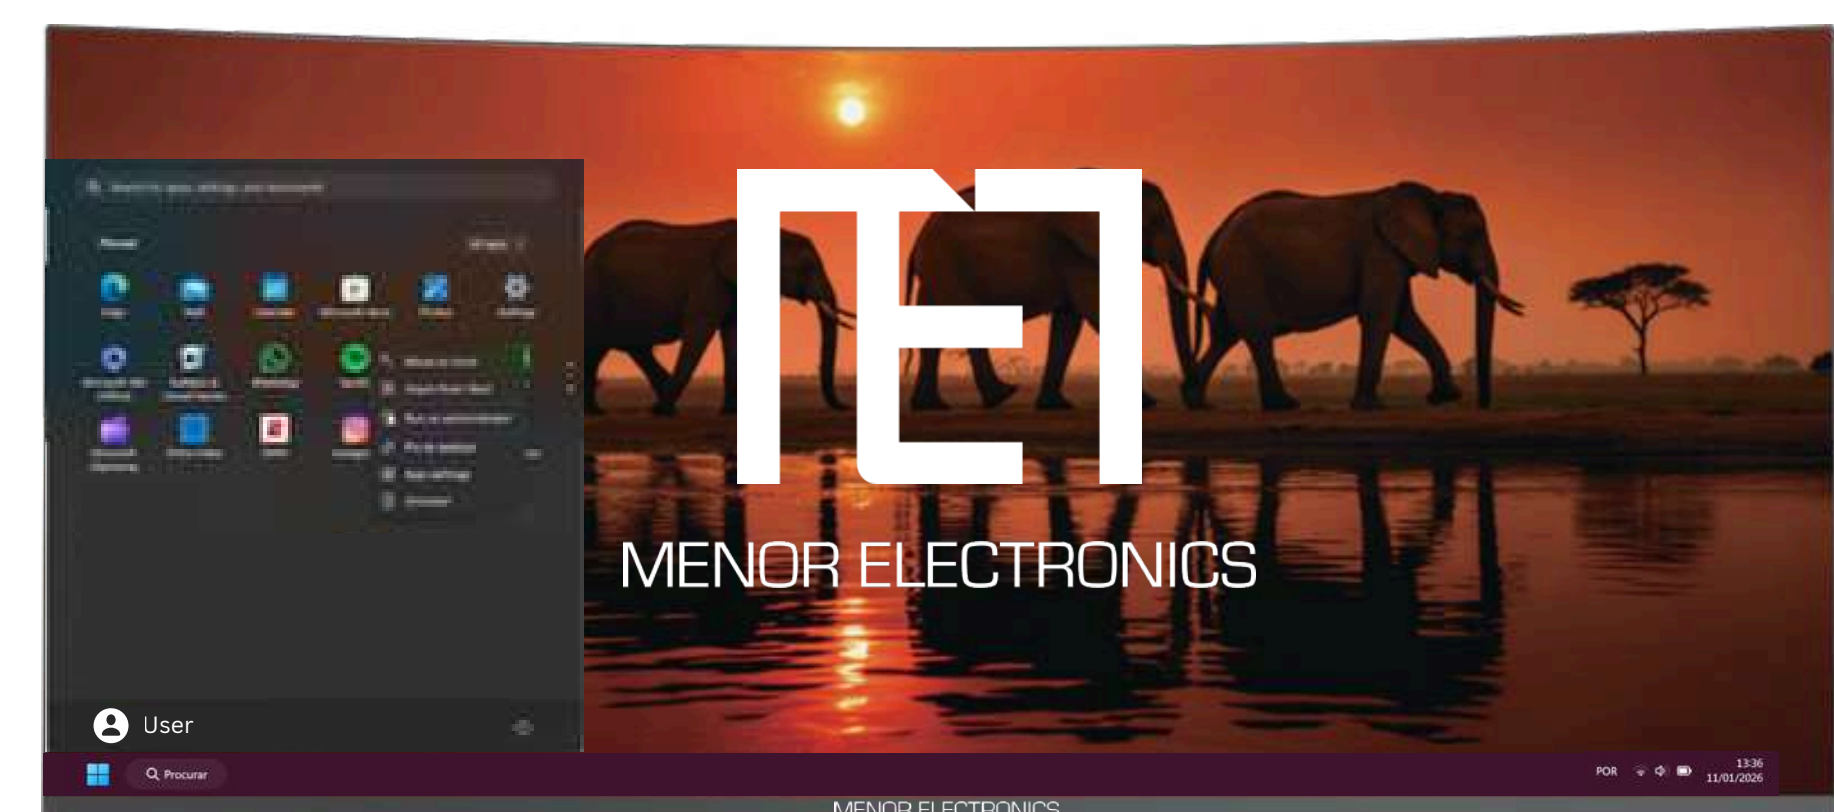

## Barra de Pesquisa

Clique com o botão direito na barra de tarefas e vá para *Configurações* da barra de tarefas. Em itens da barra de tarefas, alterne para Ativar/Desativar ao lado de Pesquisar para configurar.

## Alterar a localização da barra de tarefas

Clique com o botão direito do rato em qualquer espaço vazio na barra de tarefas. Selecciona *Configurações da Barra de Tarefas* > *Comportamentos da Barra de Tarefas* > *Barra de Tarefas* e, em seguida, selecciona *Centro* ou *Esquerda*.

## Reorganizar botões da barra de tarefas

Arraste um botão da sua posição actual para outra.



 
# All-in-one CELESTE PRO

Além das Estrelas 



## Barra de menu


Gestor de arquivos, configurações, fonte de alimentação e todas as aplicações, pode pôr a hibernar / desligar / reiniciar o dispositivo.

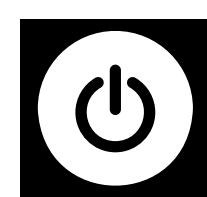

Alimentação



 
Gerir arquivos e aplicações

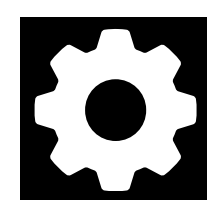

Configurar o seu All-in-one Celeste Pro

## Interface operacional multitarefa

 Clique na vista de tarefas do Ambiente de Trabalho para operar um interface multi-operacional.

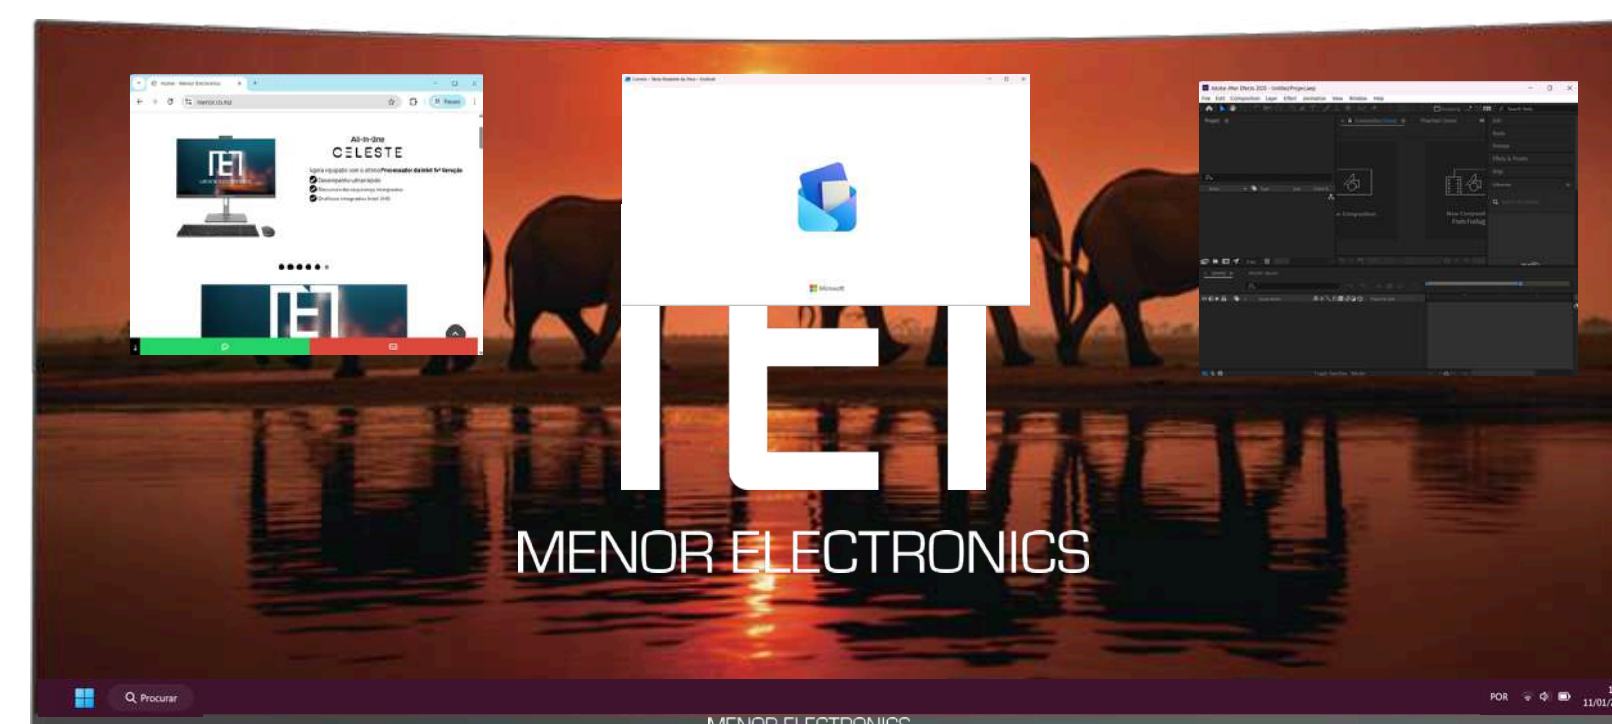




## O Centro de Acção do Windows

O Centro de Acção é onde pode encontrar as notificações das e acções rápidas. No canto inferior direito do ecrã, procure o ícone do Centro de Acção.

 O Centro de Acção permite o acesso a configurações rápidas, na forma de pequenas caixas na parte inferior do painel.


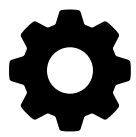 
As notificações no centro de acção são classificadas em categorias por aplicação.

O Centro de Acção também suporta notificações accionáveis, tais como mensagens de texto recentes, e-mails ou a integração de redes sociais.

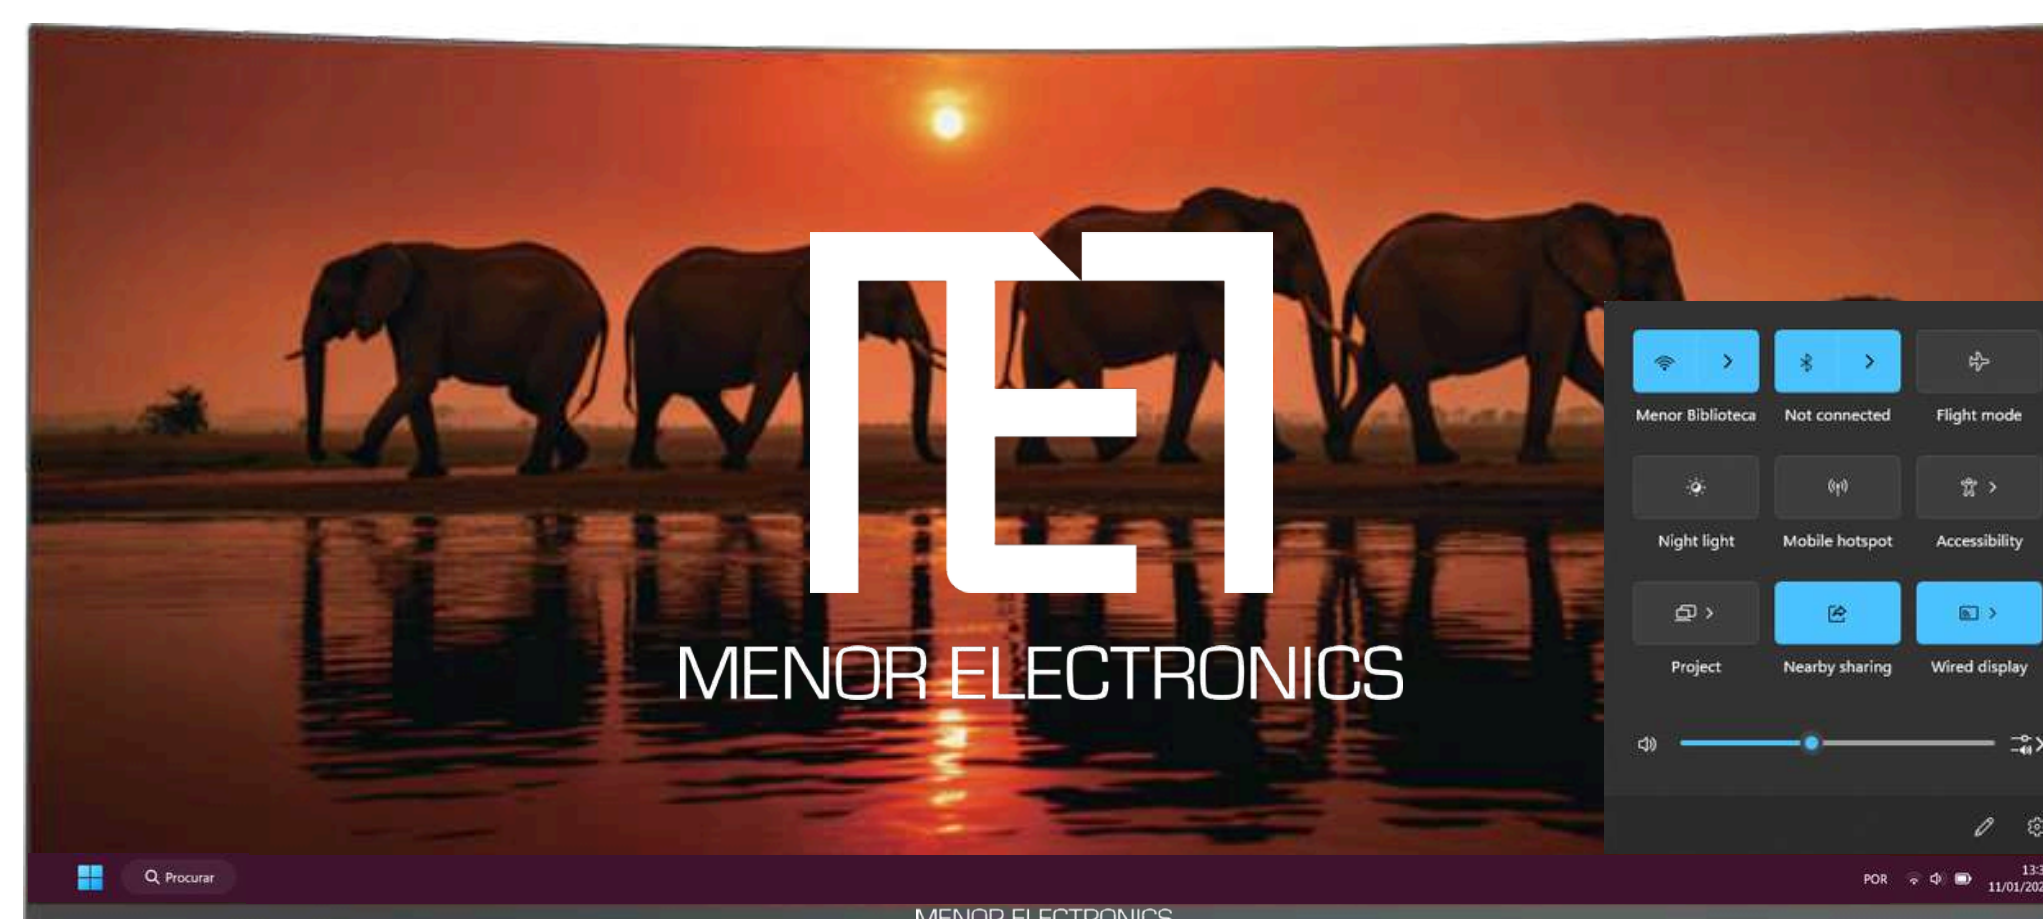

# Personalização

 
Alterar o papel de parede e os temas

Prima Iniciar  e seleccione o ícone  de definições. Seleccione o menu de personalização e irão aparecer as opções para alterar o seu fundo/tema do ambiente de trabalho e ecrã de bloqueio. Nesta secção: também tem a opção de alterar as cores de destaque do Windows e escolher quais elementos e cor usar.

## Para transferir novas aplicações

Para instalar novas aplicações aprovadas pelo Windows, clique no ícone da Loja Windows na barra de tarefas inferior.

Lá encontrará mais de 1 milhão de aplicações, inclusive muitas que são gratuitas. Mesmo que apenas tenha a intenção de usar aplicações gratuitas, precisará de criar uma conta do Windows, sem a necessidade de adicionar os detalhes do seu cartão de crédito.

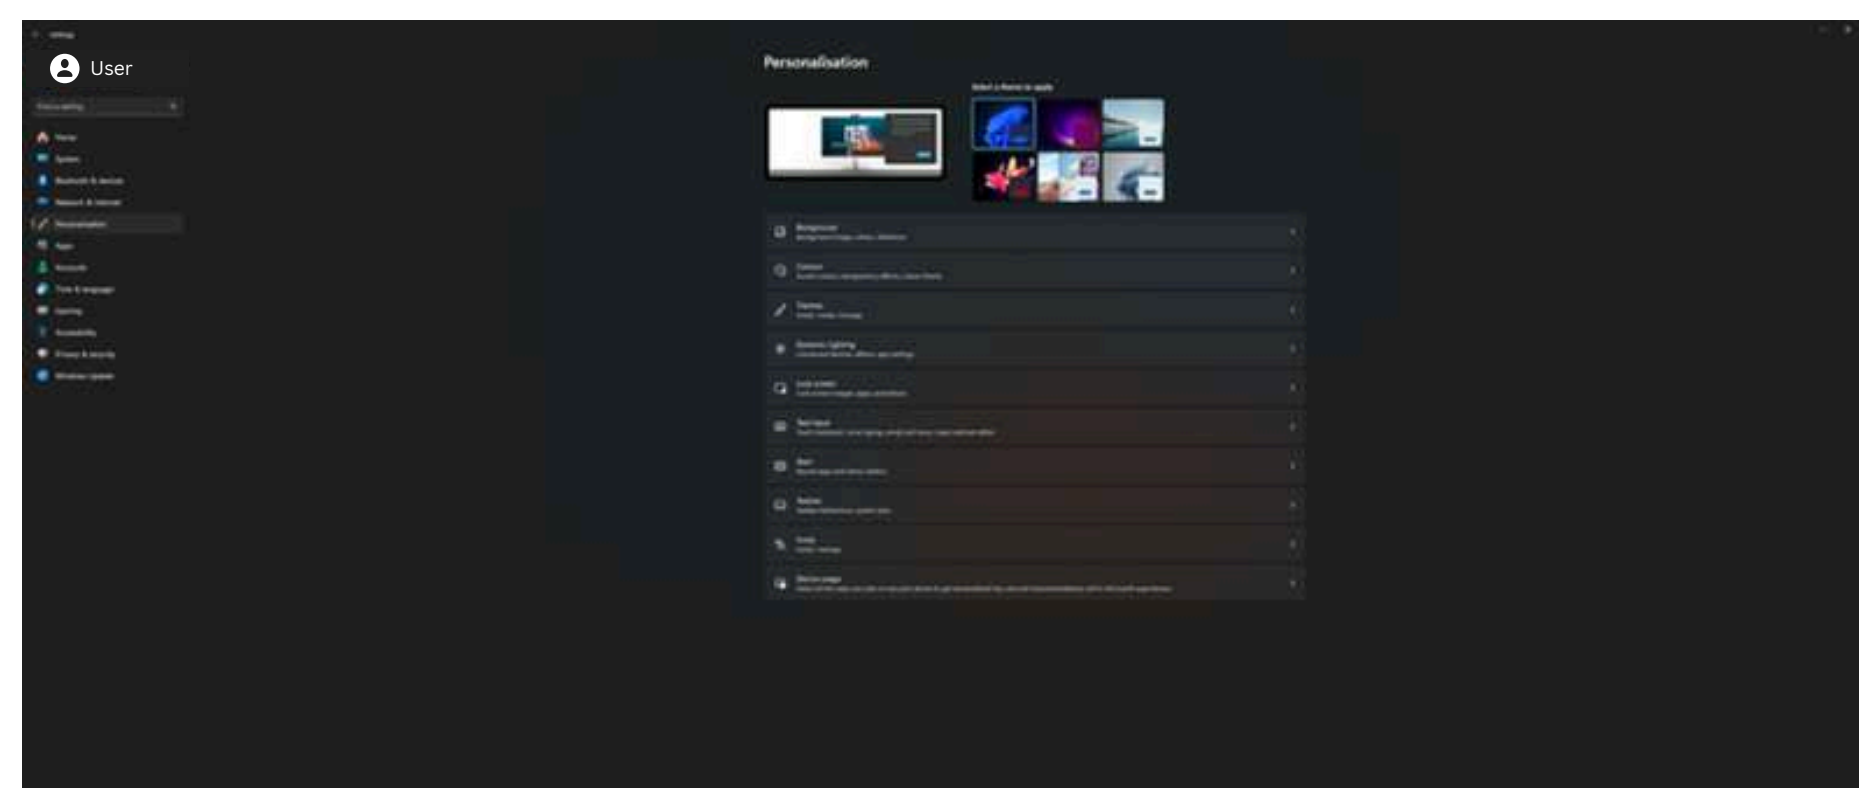



# Especificações

Ecrã	Tela curva de 34 polegadas. Gaming 165Hz.	
Chipset	H610 chipset	
CPU	I5-14400	I7-14700
RAM	DDR4 32GB 3200mhz	DDR4 64GB 3200mhz
SSD	1TB M.2 NVMe PCIe 3.0	2TB M.2 NVMe PCIe 3.0
GPU	RTX 3060 12GB 192bits	RTX 4060 8GB 128bits
WLAN	Wi-fi 6E, bluetooth 5.3	
Fonte de Alimentação	Adaptador CE 300W	Adaptador CE 500W

Desenvolvido em Maputo, Moçambique  
Montado na China

**C E L E S T E**

The background of the entire image is a deep space photograph showing a dense field of stars of various colors (white, yellow, orange, red, blue) against a dark black sky. The stars are scattered across the frame, with some appearing as bright points and others as faint specks.

# ME

MENOR ELECTRONICS

Estamos aqui para deixar uma marca no  
universo!



We are here to leave a mark on the universe!

MENOR ELECTRONICS

ME

C  
E  
L  
E  
S  
T  
E



Beyond the Stars

CELESTE PRO

All-in-one

# Specifications

Display	34 inch Curved Screen. Gaming 165HZ	
Chipset	H610 chipset	
CPU	15-14400	I7-14700
RAM	DDR4 32GB 3200mhz	
SSD	1TB M.2 NVMe PCIe 3.0	
GPU	RTX 3060 12GB 192bits	
WLAN	Wi-Fi 6E, bluetooth 5.3	
Power Supply	Adaptador CE 300W	Adaptador CE 500W

Developed in Maputo, Mozambique  
Assembled in China



14

MENOR ELECTRONICS

www.Menor.co.mz

# Personalizing

Changing your wallpaper and themes

 
Press *Start*  and select the settings icon 


Select the personalization menu where you will be greeted with the options to change your background/theme for the desktop and lock screen. In this section, you also have the option to change the Windows accent colours and choose which elements will use the colour.

Adding a shortcut tile to start menu

To install new apps approved by Windows, click the Windows Store icon on the bottom taskbar.

There you will find over 1 million apps including many of which are free. Even if you are only going to use free apps you will still need to create a Windows account but you don't need to enter your credit card details to do this.

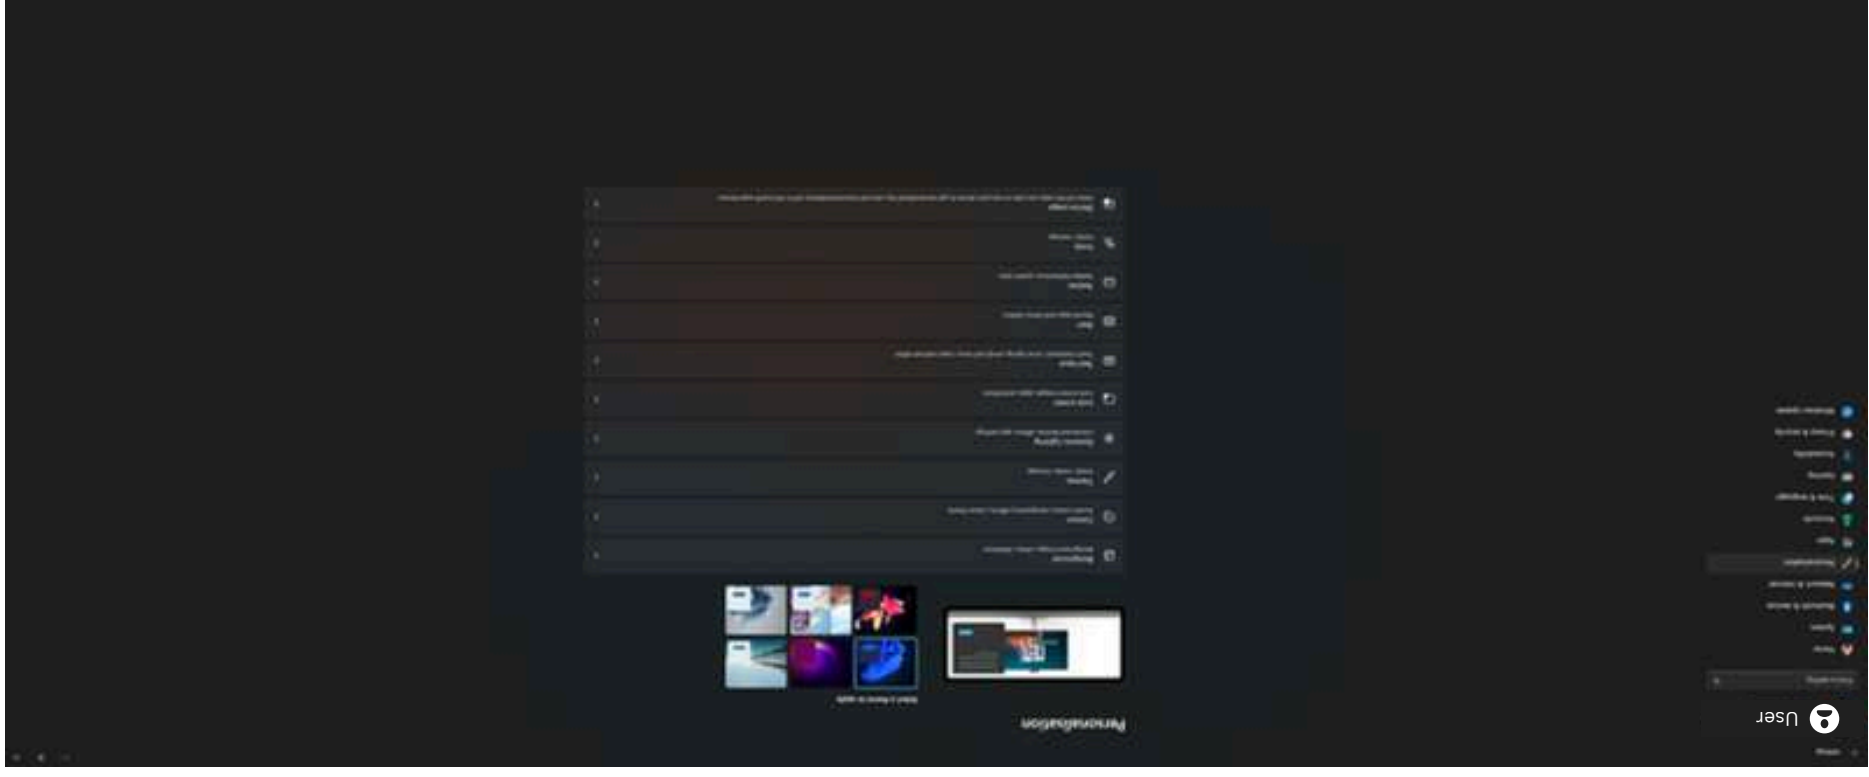

**All-in-one**  
**CELESTE PRO**  
Beyond the Stars 

## Windows Action Centre

The Action Center is where you can find application notifications and quick actions. On the bottom right corner of the screen, look for the Action Center icon.

The Action Center allows access to quick settings, in the form of small boxes at the bottom of the panel.

Notifications within the action centre are sorted into categories by app.

The Action Center also supports actionable notifications, such as recent text messages, emails or social media integration.



# MENOR ELECTRONICS

www.Menor.co.mz

 


## Menu bar

Expand the menu bar from the screen. File manager, settings, power supply and all applications, you can sleep / shutdown / restart the device.



Manage files and applications

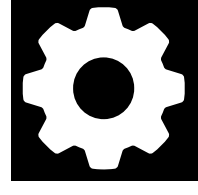

Set up your All-in-one Celeste

## Multitasking operating interface

Multitasking operating interface  
 Click the Desktop task view to operate a multi-operating interface.





## Search Box

Right-click the taskbar and go to Taskbar settings. Under Taskbar items, toggle the switch to On/Off next to Search to set up.

 
## Change the taskbar location

Right-click any space on the taskbar. Select Taskbar settings > Taskbar behaviors > Taskbar alignment and then select Center or Left.




## Rearrange taskbar buttons

Drag a button from its current position to a different one.

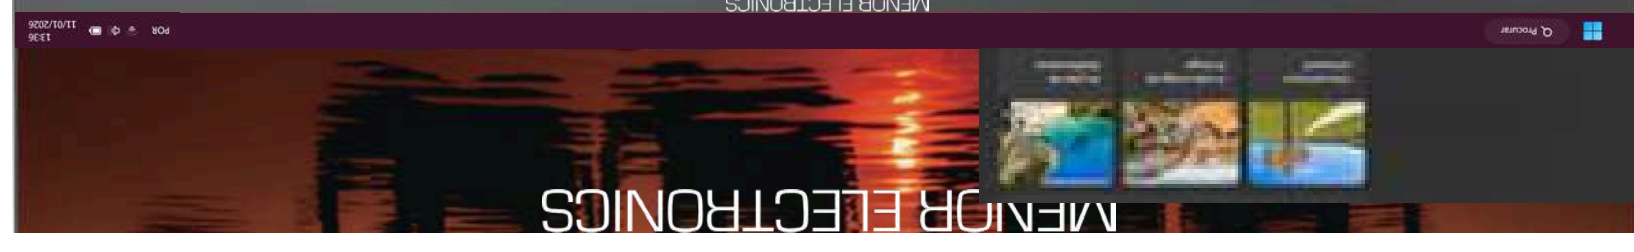



# User Interface Start Menu

To open the start menu select the icon  in the bottom left-hand corner of the desktop. Once the menu has been opened you will be greeted with a variety of options.

## Applications

 
 
In addition to already fixed on the start screen of the application, you can open all applications on the home page.

Adding a shortcut tile to start menu

1. Right-click on properties.

2. Select fixed at the beginning of the

page.

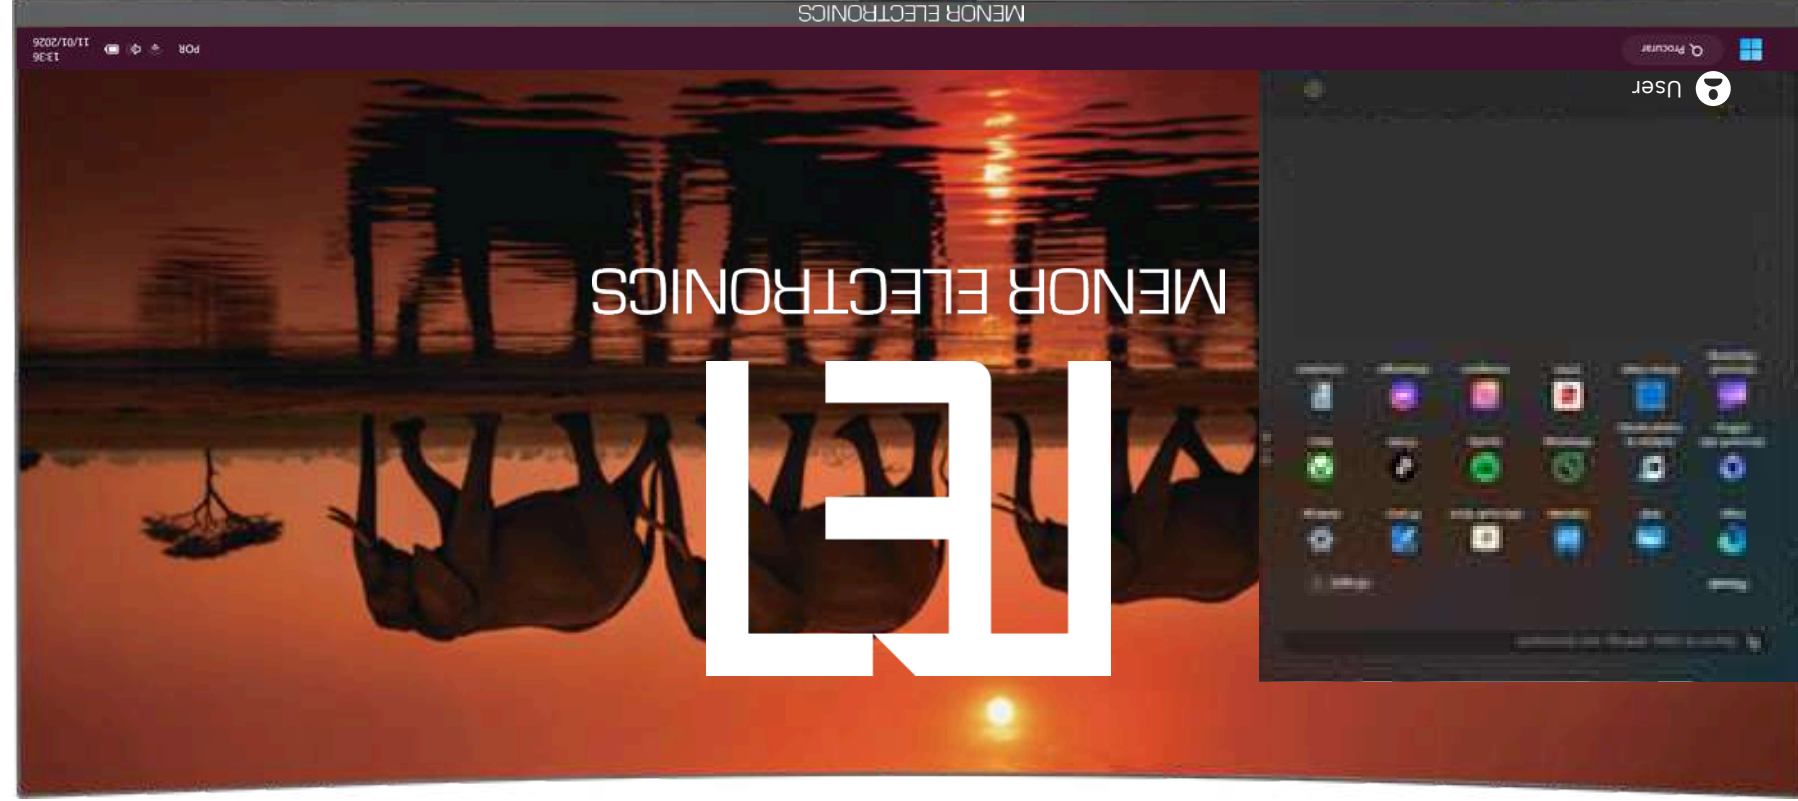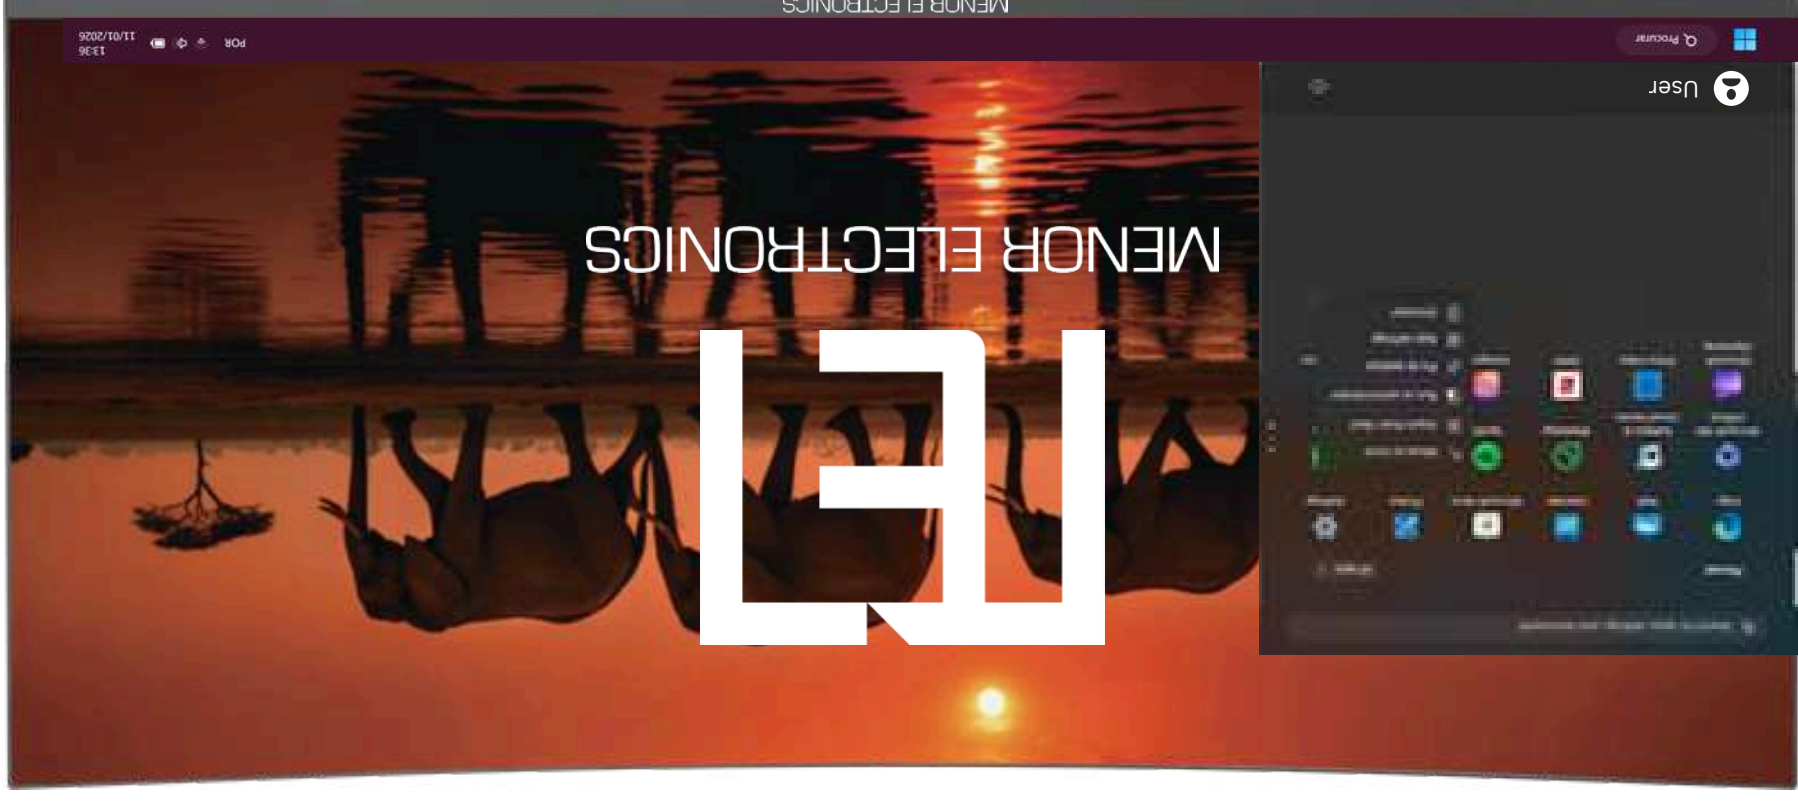

# Connect to a Wi-Fi network


The notification bar displays icons that indicate your All-in-one Celeste Pro internet status.




Connected to a Wi-Fi network (waves indicate connection strength).

 


There are no Wi-Fi networks in range, or the Wi-Fi is not connected.

Open the Settings menu by pressing the Start button and clicking on the cog/settings icon . Select your network from the list of available networks. The All-in-one Celeste Pro will prompt you to confirm connection to the network. Touch Connect to confirm.

If the network is secured (as indicated by a lock icon), the All-in-one Celeste Pro will prompt you to enter a password or other credentials.

 The settings icon can also be found on the desktop. Open the *Network and Internet* menu and turn the WiFi on.

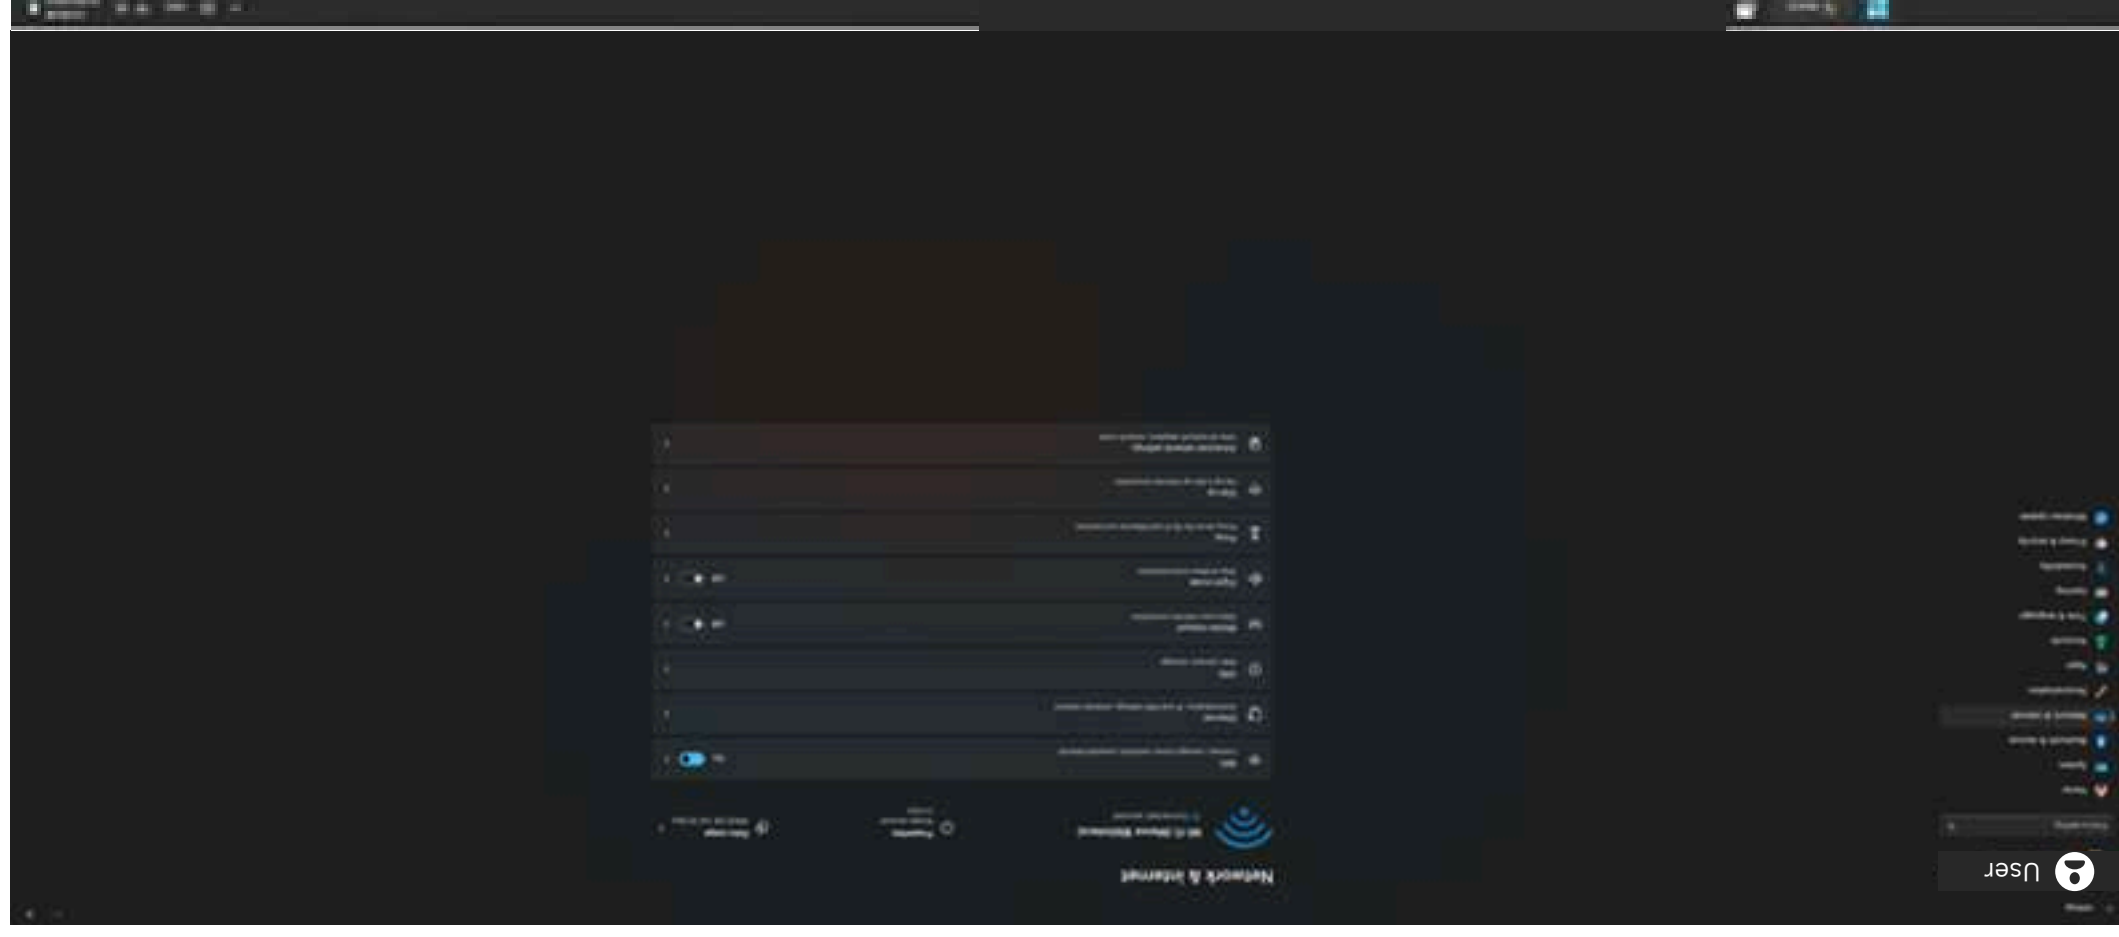


## Screen Settings

### Turning the Screen On or Off

When the All-in-one Celeste Pro is on, you can turn off the screen to protect the screen. Simply press the start button and click on the power icon, then choose sleep.

 It is strongly recommended that you sign into/register for a Windows account (needed for the installation of new apps). When prompted it is also recommended that you agree to backing up your All-in-one Celeste Pro. This creates copies of all of your files should you ever need to restore the All-in-one Celeste Pro.

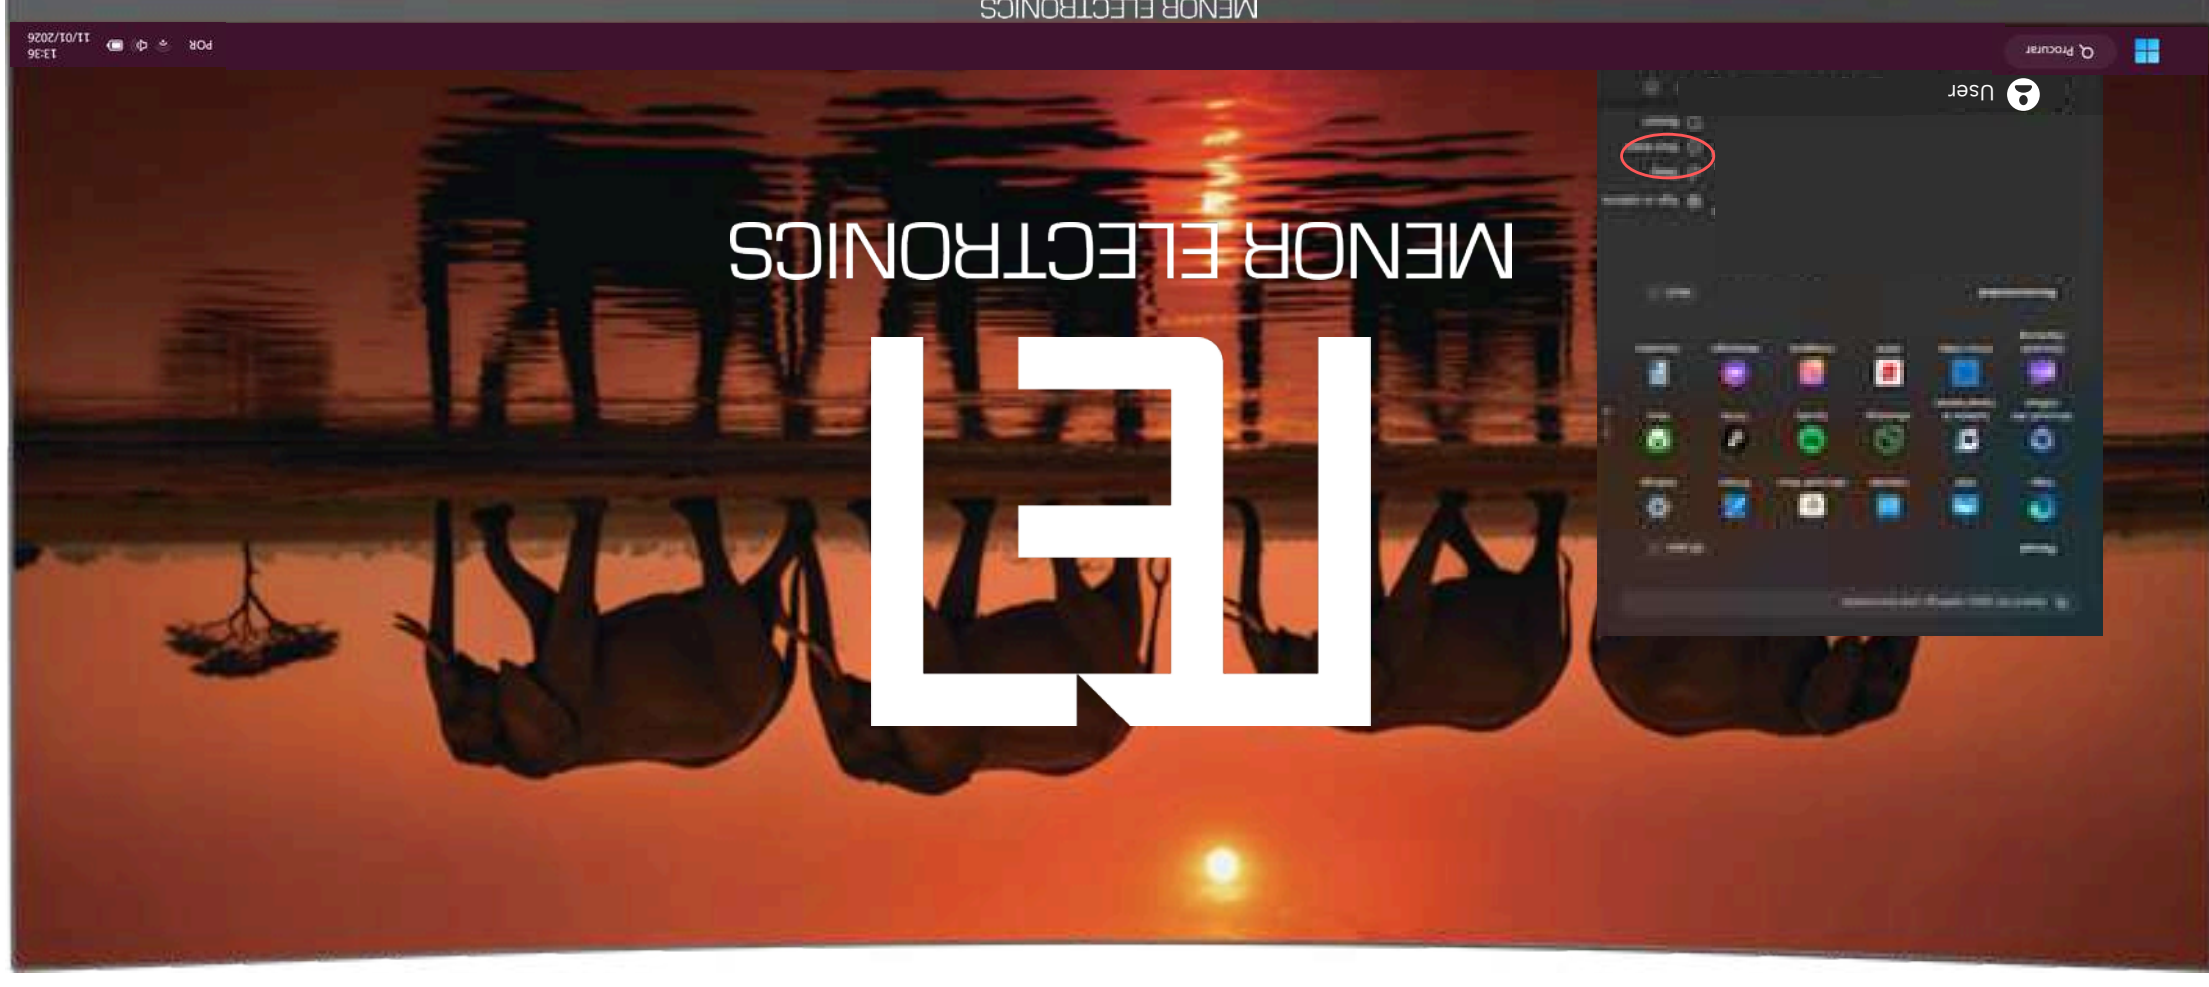

# Powering up the All-in-one Celeste Pro

To turn the All-in-one Celeste Pro on

To turn the All-in-one Celeste Pro on press and hold the Power key for 2 seconds, until the screen turns on.

Wait until the Desktop screen appears. The All-in-one Celeste Pro is now ready for use.

To turn the All-in-one Celeste Pro off

Press the *Start* button and click on the power icon. This then gives the option to shutdown, sleep.



# Using the All-in-one Celeste Pro

## Starting up

Press and hold the Power key until the screen turns on.  
Wait until the Desktop screen appears.  
The computer is now ready for use.

The first time you use your All-in-one Celeste Pro, the startup wizard will help you set up your device:

- Language
- Date & Time
- Wi-Fi Connection
- Location service options
- Third-party applications
- Necessary Updates
- Account Synchronization



# Know the All-in-one Celeste Pro screen

 
1. **Start Screen** - Display useful information at a glance without opening the app.
2. **Microsoft™ Account** - Change account settings or switch to another user account.
3. **Settings** - View and change any system settings.
4. **Power** - Shut Down, Hibernate or put your PC to sleep.
5. **Search Bar** - Quickly find files, directions, information or the name of a song.
6. **Notification Area** - View all notifications, date and time.

! You need to log in to your Microsoft account before the application program completely runs.



All-in-one  
CELESTE PRO  
Beyond the Stars

# Know your All-in-one Celeste Pro

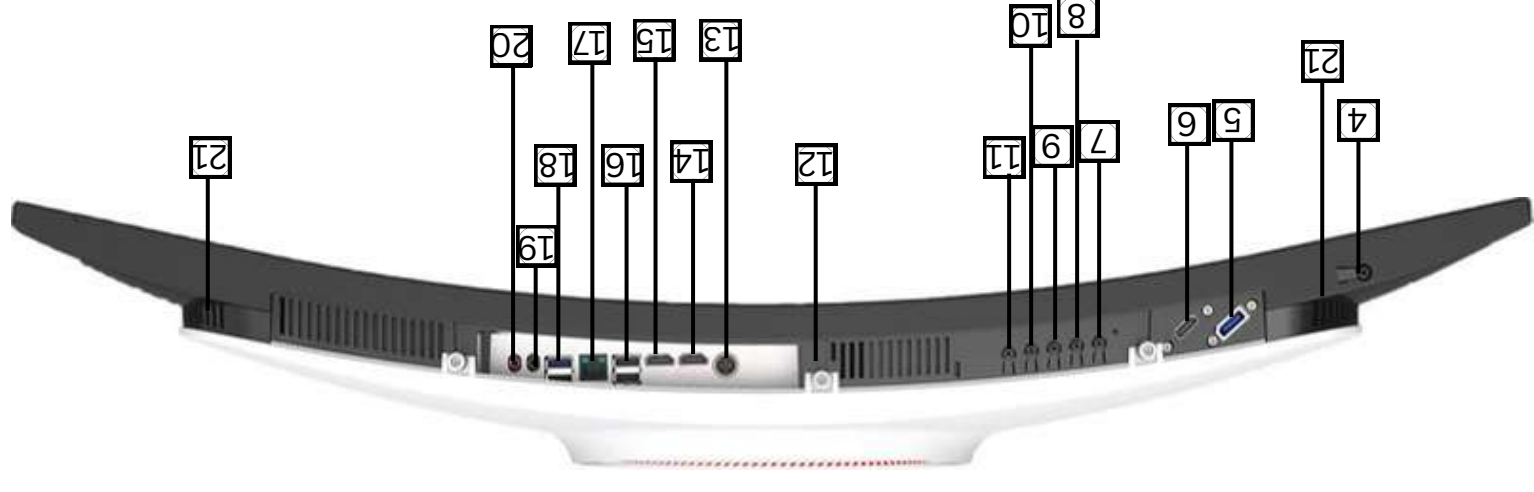

1. Power Button
2. Beyond the Stars
3. USB-A
4. Rainbow Button
5. PBP DP\_in
6. PBP HDMI\_in
7. LCD Menu
8. Upper
9. Down
10. Exit
11. LCD Power
12. KENSINGTON Lock Hole
13. DC\_in
14. HDMI\_in
15. HDMI\_out
16. USB 2.0
17. LAN RJ45
18. USB 3.2 Gen2
19. Mic\_in
20. Line\_out
21. Speakers



# All-in-one Celeste Pro Overview

 
## Features




Browse the Web  
Visit your favourite websites




Check your e-mail  
Keep in touch with friends and family

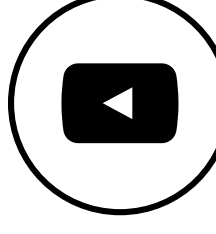

 Watch YouTube™ videos  
Browse the world's most popular video-sharing community

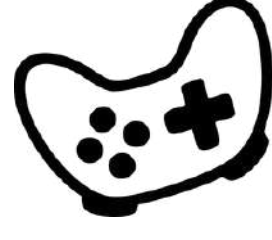

 
Gaming  
Enjoy high-resolution video games, multimedia applications, and digital entertainment.

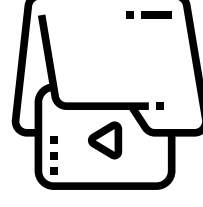

Enjoy your media library  
Portable powerhouse plays popular music, video, and photos



 Connect to the Internet wirelessly  
High-speed Wi-Fi 802.11 ac/b/g/n networking

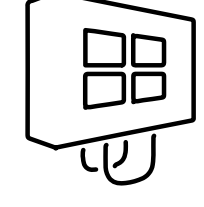

Discover thousands of apps for Windows™  
Install games, applications and more via the installed Microsoft Store™




# Precautions before Use

1. This production is suitable for use in areas below 2,000 meters.
2. Prevent the device from falling to the ground or being strongly impacted.
3. Do not use it long-term in any environment where the air is too cold, too hot, too humid or with too much dust. Do not expose the device to sunlight.
4. Avoid using it in the strong magnetic and static environment as much as possible.
5. Once any water or other liquid splashes onto the device, turn it off immediately and do not use it until it dries out.
6. Do not clean the device with any detergent containing chemical elements or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is necessary, clean it with dry soft cloth tissue paper.
7. MENOR ELECTRONICS shall not bear all responsibilities for the loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance, or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the device by yourself; otherwise, you will lose the right to warranty.



# MENOR ELECTRONICS

Beyond the Stars 

Pro performance, heavenly design. Discover the  
perfect fusion of advanced technology with the  
All-in-one CELESTE PRO

# ME



User Guide


Beyond the Stars 

**CELESTE** **PERFORM**

All-in-one



User Guide

Beyond the Stars 

**CELESTE** **PRO**

All-in-one